




Low Base Style Door Bumper



Drill two 1/4" holes on floor 3/4" apart for metal stud & plastic anchor.

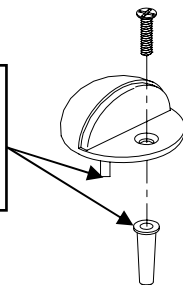


Goose Style Door Bumper



Note: Before drilling, determine the best location for bumper that suits your door stop needs.

Drill two 5/16" holes on floor 7/16" apart for stud & plastic anchor.

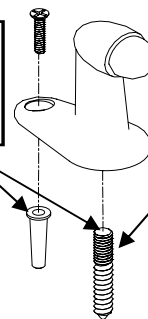

Install threaded stud to bumper